


# WP311 Waterproofing Concrete Balconies (over screed)

## Preparation:

1. All surfaces to be waterproofed must be firm, clean, dry, sound and smooth. All grease, oil, wax, curing compounds, loose material, paint and any other contaminants must be removed, masonry surfaces must be pointed flush and surface defects repaired. New concrete must be cured for a minimum of 28 days.
2. External corners to be waterproofed must be bevelled to ensure a smooth transition of membrane from vertical to horizontal surfaces.


## Installation:

1. Waterproofing installation shall be in accordance with the applicable provisions of the National Construction Code.  
Tile installation shall be in accordance with AS 3958 Installation of Ceramic and Stone Tiles.
2. Install **TPA Screed** to achieve appropriate falls to waste. Where a bonded screed is required, apply a bond coat using **TPA 401M** or **TPA Lite**.  
If an engineered, rapid screed is needed, install **TPA Rapid Screed**, with a bond coat of **TPA Rapid** for bonded screeds.  
**TPA Screed** is a pre-blended screed mixture for the installation of cementitious screeds and tile beds, suitable for internal and external floor applications.  
**TPA Rapid Screed** is a pre-blended, rapid set, engineered screed mixture for the installation of cementitious screeds and tile beds, suitable for internal and external floor applications.  
**TPA Rapid** is a high-quality, cost-effective, rapid setting, polymer-modified, grey cement-based tile adhesive.
3. Install a puddle flange to all waste pipes, ensuring that puddle flanges are recessed into the substrate.
4. Recess outside edge of balcony to accommodate **TPA Tile Edge Balcony Trim** if required. Fix balcony trim using **WPA MS** or **WPA SPUR** and/or Class 3 galvanized screws.  
**WPA MS** is a single component, moisture cured silane modified hybrid sealant.  
**WPA SPUR** is a high quality, professional, universal, low modulus sealant based on hybrid technology.
5. Prime PVC and other non-porous substrates using **WPA 160** primer.  
**WPA 160** is a specialised solvent free primer designed for enhancing the adhesion of subsequent membranes, adhesives, toppings and decorative finishes over non-porous substrates.
6. Apply **WPA 460** or **WPA 560** primer to the substrate being waterproofed.  
**WPA 460** is a two-part, water-based epoxy primer, used to seal concrete and masonry surfaces.  
**WPA 560** is a two-part, water-based epoxy primer, designed as a water and vapour proof coating under waterproofing membranes.
7. Apply **WPA 200** membrane in a minimum of two coats to achieve the required dry film thickness. Ensure that the previous coat has completely dried before applying the subsequent coat(s). NOTE: All penetrations must be waterproofed.  
**WPA 200** is a flexible, two-part, rapid drying, cementitious waterproofing membrane system, specifically designed for use under tile, stone and exposed applications.
8. All transitions must be detailed utilising **WPA Elastoband**.
9. Install tiles using **TPA 401M**, **TPA 501R** or **TPA Lite** tile adhesive.  
**TPA 401M** is a white, flexible, powdered adhesive for wall and floor applications.  
**TPA 501R** is a cost effective, high coverage, flexible, powdered adhesive for wall and floor applications.  
**TPA Lite** is a premium grade, white, fibre reinforced, flexible cement based tile adhesive, based on a light weight formulation.
10. Grout tiles using **TPA Tru Colour Grout** or approved alternative.  
**TPA Tru Colour Grout** is a high-performance stain & efflorescence resistant grout, designed for use with most types of Ceramic, Mosaic, Natural Stone and Glass Tiles.
11. Install backing rod to all perimeter and intermediate movement joints and seal with **TPA Tru Colour Sanitary Silicone** or approved alternative.  
**TPA Tru Colour Sanitary Silicone** is a mould resistant, non-diluted, high performance, UV resistant, neutral cure silicone sealant.

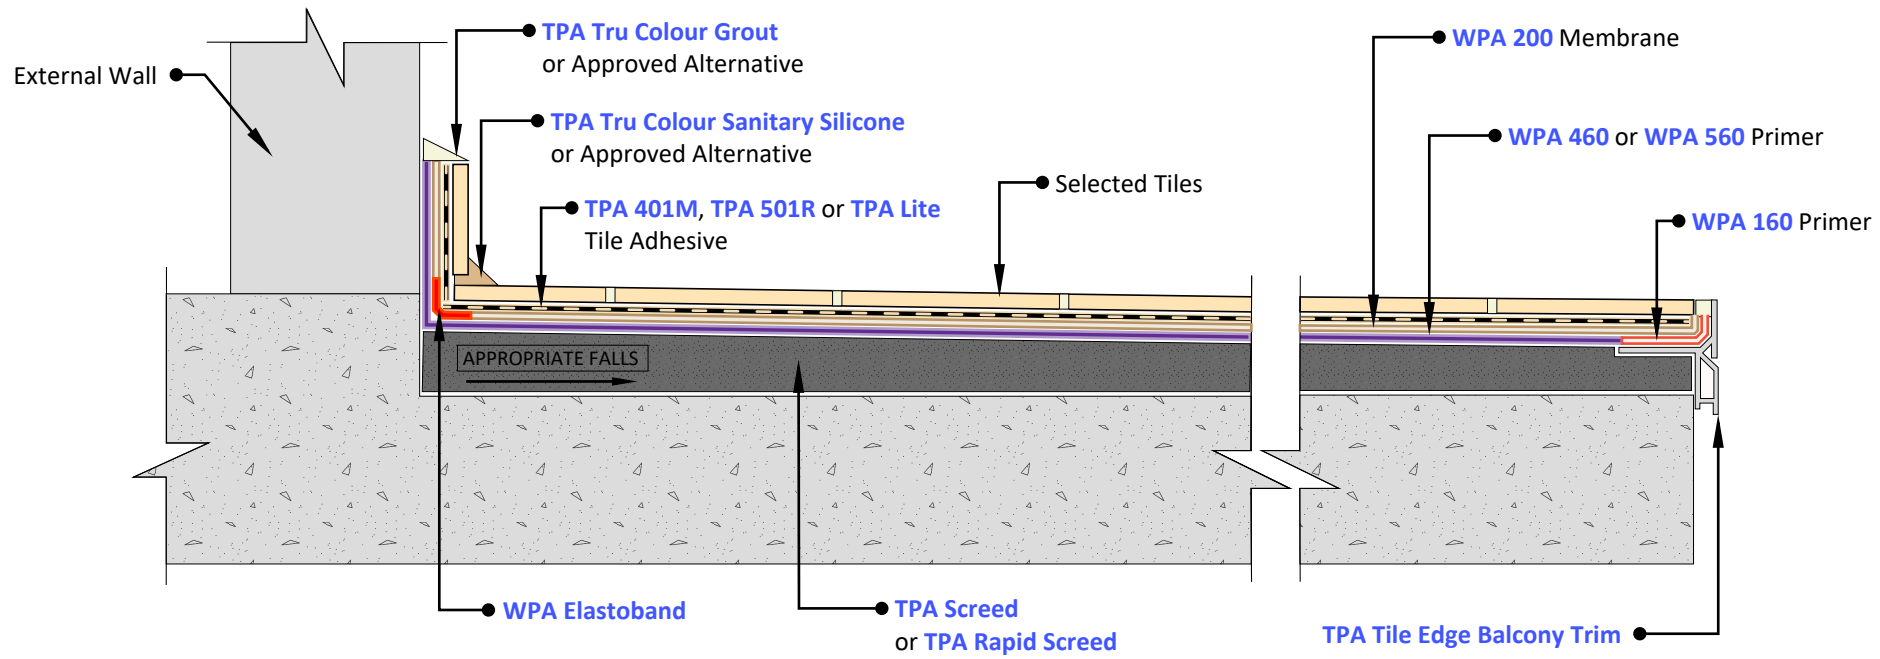


1 Floor/Wall Junction  
Scale: NTS

2 Balcony Trim  
Scale: NTS

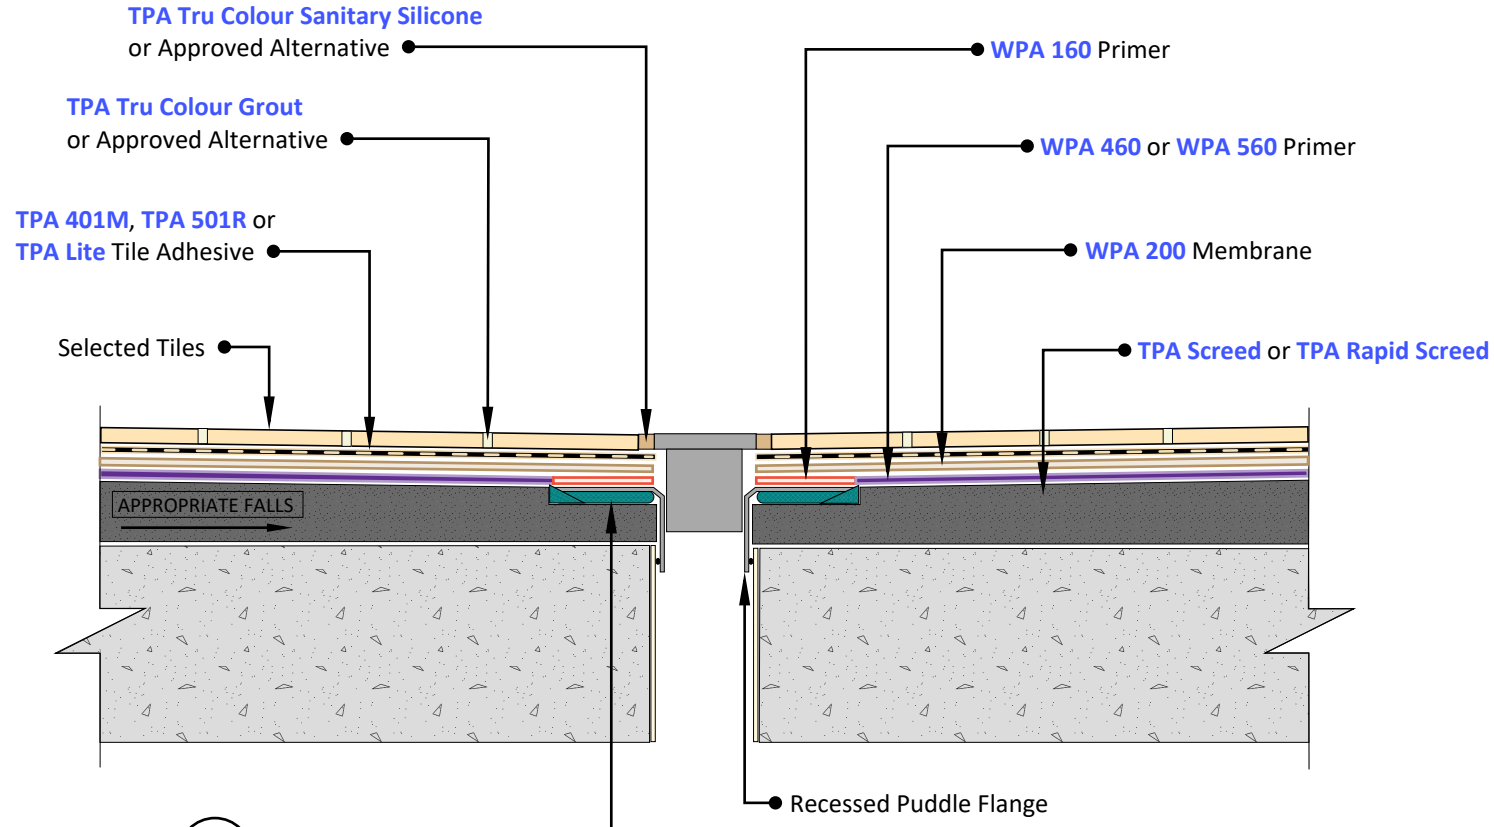

3 Waterproofing at Waste  
Scale: NTS

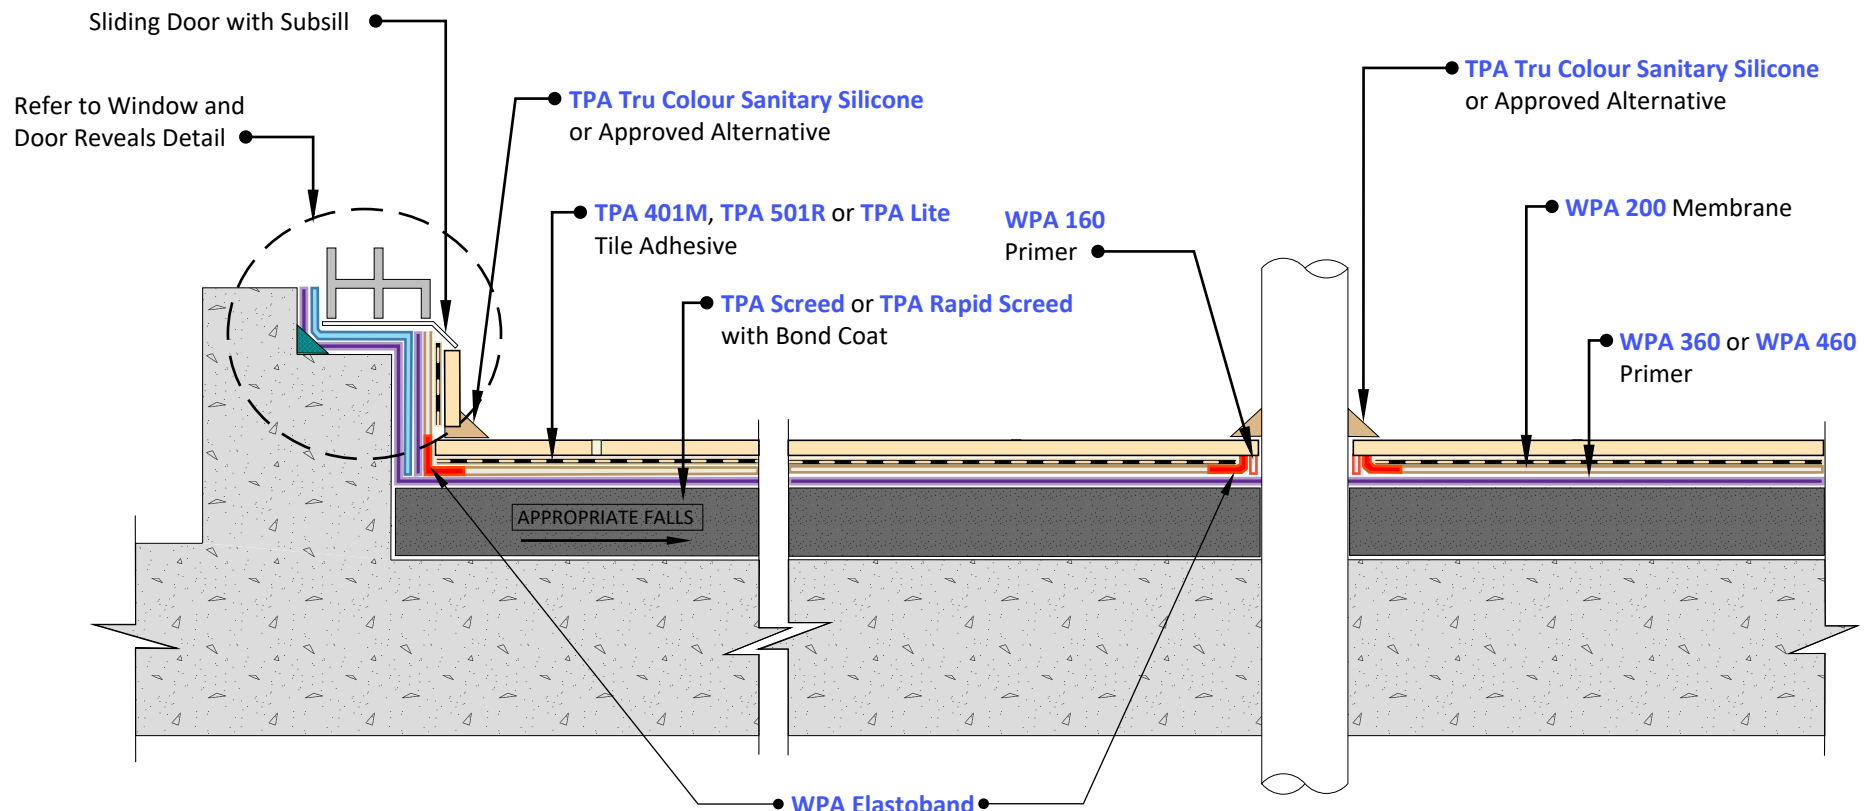

4 Sliding Door Detail  
Scale: NTS

5 Pipe Penetration  
Scale: NTS

© COPYRIGHT BAYSET PTY LTD  
ANY FORM OF REPRODUCTION OF THIS DRAWING IN FULL OR IN PART WITHOUT THE WRITTEN PERMISSION OF BAYSET PTY LTD CONSTITUTES AN INFRINGEMENT OF COPYRIGHT



**Waterproofing Concrete Balconies (over screed)**

DRAWING NUMBER

**WP311**

SCALE: NTS

RELEASE: November 27, 2024

DRAWN BY: CS